


Instruction **Supplement**

Series B9

Electronic Metering Pump

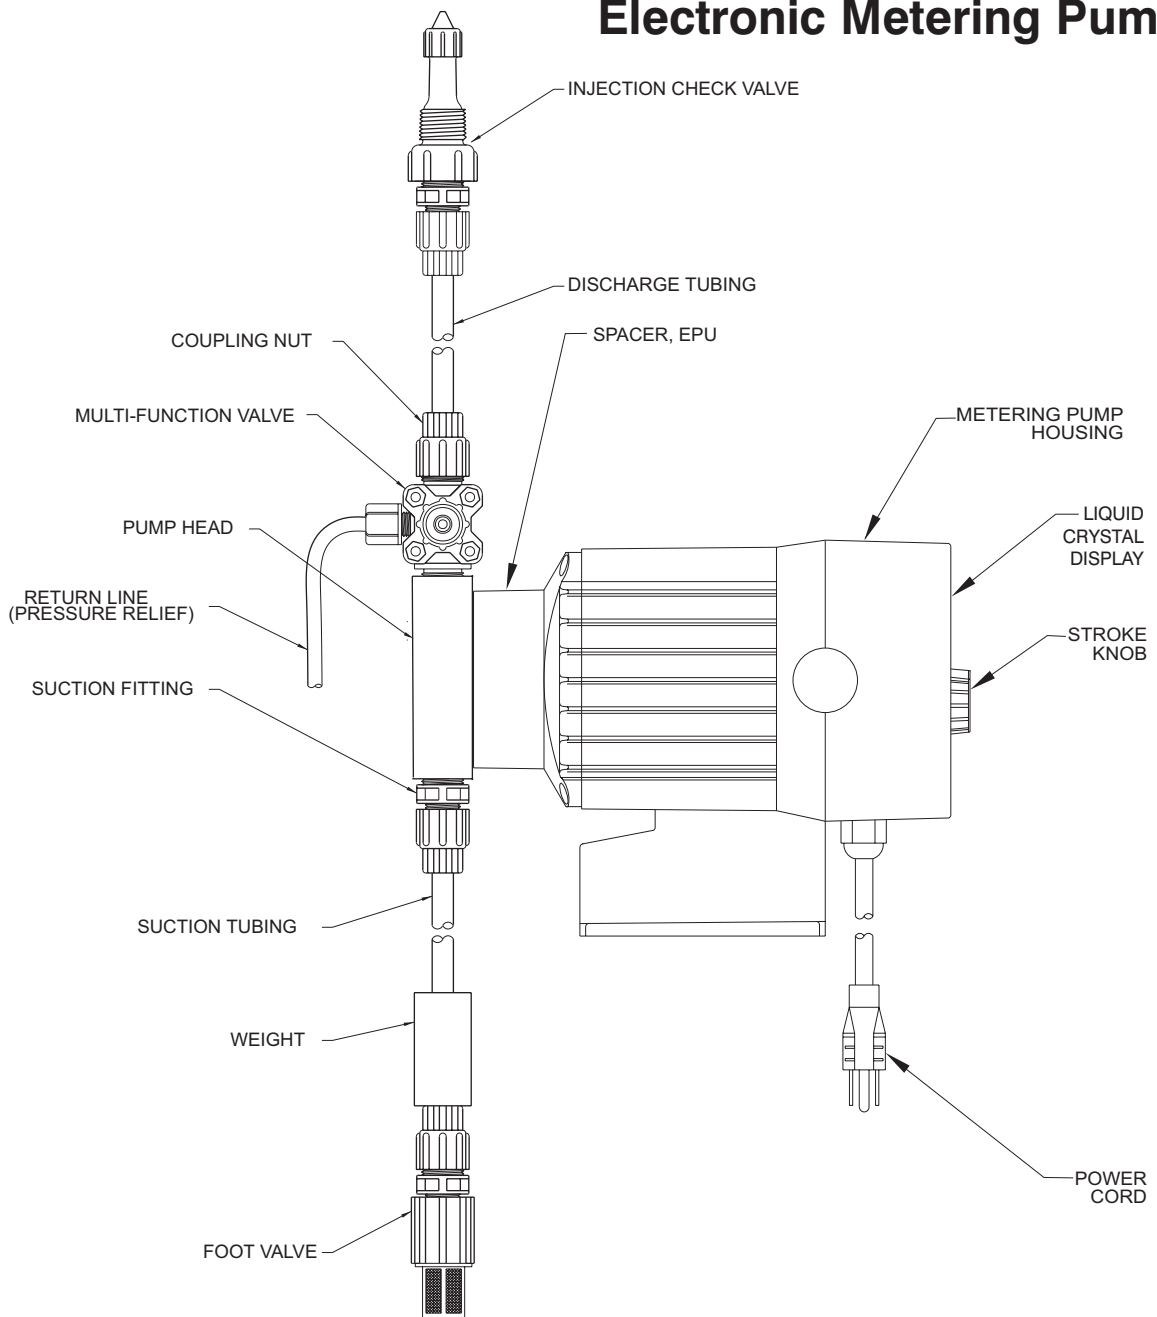

Metering Pump Component Diagram




201 Ivyland Road
Ivyland, PA 18974 USA
TEL: 215-293-0401
FAX: 215-293-0445
<http://www.lmipumps.com>



Replaces same of Rev. D 9/01
1794.E 1/04


Series B9 Drive Assembly Exploded View Diagram

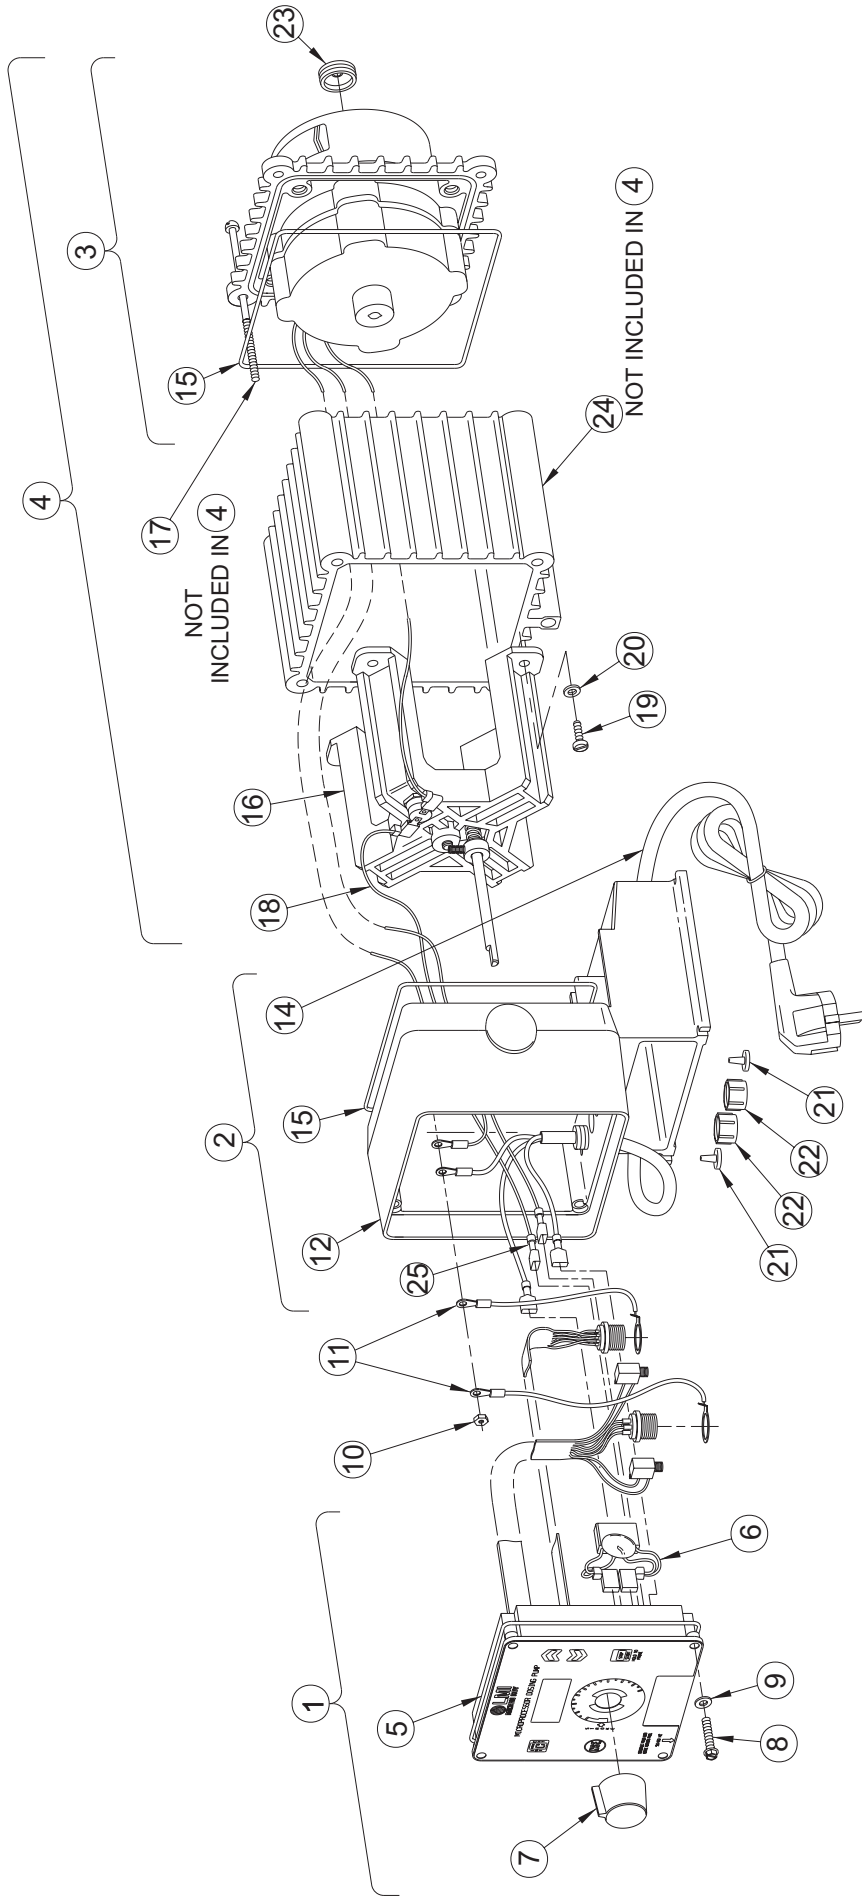

Series B9 Drive Assembly Parts List

KEY NO	MODEL SERIES	PART NO.	DESCRIPTION	QTY.	KEY NO	MODEL SERIES	PART NO.	DESCRIPTION	QTY.
1	B911	35901CE	Control Panel Assembly, 120V	1	10	B9	10191	Nut, 6-32	2
	B921, B931, B941	35895CE	Control Panel Assembly, 120V	1	11	B9	35266	Wire Assembly	2
	B912, B913, B915, B916, B917	35954CE	Control Panel Assembly, 230V	1	12	B9	35890	Housing	1
	B922, B923, B925, B926, B927	35953CE	Control Panel Assembly, 230V	1	14	B911, B921, B931, B941	29033CE	Power Cord, 120V	1
	B932, B933, B935, B936, B937					B912, B922, B932, B942	29039CE	Power Cord, 230V	1
	B942, B943, B945, B946, B947					B913, B923, B933, B943	29042CE	Power Cord, 220-240V DIN	1
						B915, B925, B935, B945	29044CE	Power Cord, 220-240V UK	1
						B916, B926, B936, B946	29046CE	Power Cord, 220-240V AU/ST	1
						B917, B927, B937, B947	29048CE	Power Cord, 220-240V SWISS	1
							35269	O-Ring	2
2	B911, B921, B931, B941	35949CE	Housing Assembly, 120V	1	15	B9			
	B912, B922, B932, B942	35955CE	Housing Assembly, 230V	1	16	B9	31898	Stroke Adjustment Assembly	1
	B913, B923, B933, B943	35950CE	Housing Assembly, 220-240V DIN	1	17	B9	25127	Screw 10-24 x 4.56	4
	B915, B925, B935, B945	35951CE	Housing Assembly, 220-240V UK	1	18	B9	29410CE	Wire Assembly	1
	B916, B926, B936, B946	35956CE	Housing Assembly, 220-240V AU/ST	1	19	B9	10590	Screw	4
	B917, B927, B937, B947	35952CE	Housing Assembly, 220-240C SWISS	1	20	B9	10415	Washer	4
3	B911, B921	26893CE	EPU and Spacer Assembly	1	21	B9	30307	Plug	2
	B912, B913, B915, B916, B917	26894CE			22	B9	25930	Cap Cover	2
	B922, B923, B925, B926, B927				23	B9	10973	Seal	1
	B931	26897CE			24	B9	25068	Sleeve	1
	B932, B933, B935, B936, B937	26898CE			25	B9	26344CE	Wire Assembly	2
	B941	29618CE							
	B942, B943, B945, B946, B947	29619CE							
4	B911, B921	31927CE	EPU & Spacer Assembly w/Stroke Adj.	1					
	B912, B913, B915, B916, B917	31928CE							
	B922, B923, B925, B926, B927								
	B731	31929CE							
	B932, B933, B935, B936, B937	31930CE							
	B941	31931CE							
	B942, B943, B945, B946, B947	31932CE							
5	B9	10166	O-Ring	1					
6	B911, B921, B931, B941	35254	Varistor Assembly, 120V	1					
	B912, B913, B915, B916, B917	35255	Varistor Assembly, 230V	1					
	B922, B923, B925, B926, B927								
	B932, B933, B935, B936, B937								
B942, B943, B945, B946, B947									
7	B9	31891	Stroke Knob	1					
8	B9	30306	Screw, Self Tapping	4					
	B9	33889	Washer	4					

Series B9 Control Panel Detail

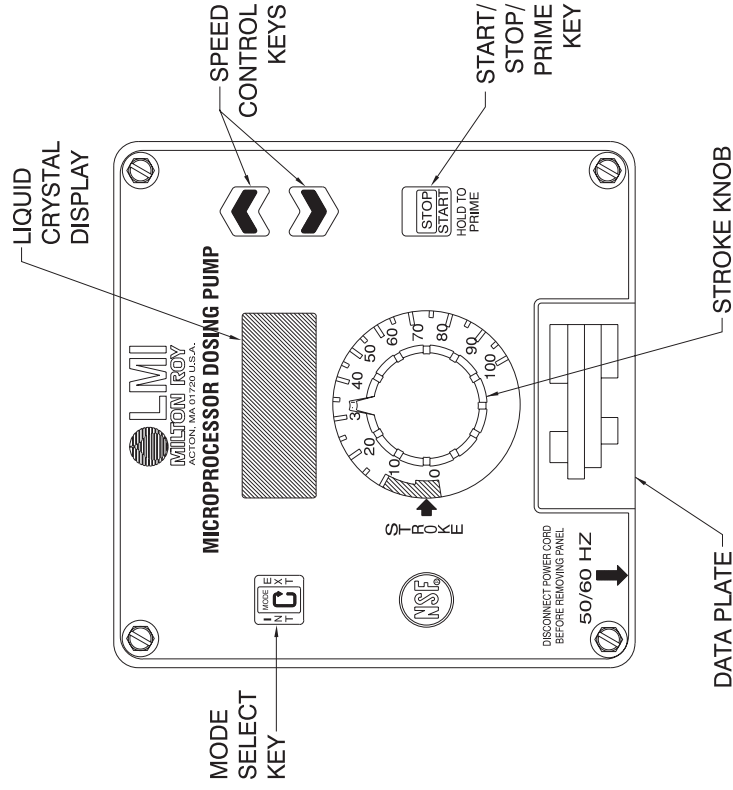

Series B9 Wiring Diagram

