


# ALFX Controller Set-Up Guide



## Mounting ALFX Controller to the Windshield

Slide the ALFX Controller (A) into the Controller Holder (B) as shown in (C). Note the Controller's 5-digit serial number, used in the WPN2 app.

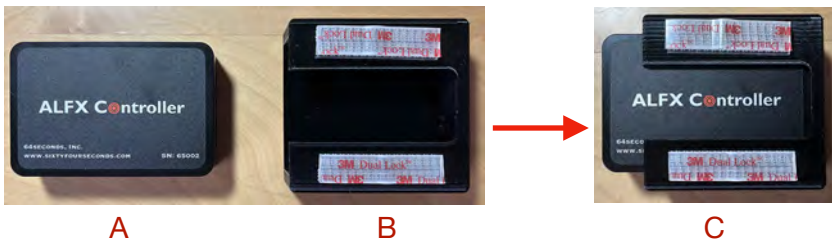

Remove the tape from the adhesive backing of the Velcro strips on the Controller Holder and stick to the windshield of your vehicle near the rear view mirror in the orientation shown here.



*(ALFX Controller label faces the windshield.)*

When you have finished surveying or follow-up activities, you can remove the ALFX Controller while leaving the Controller Holder attached to the windshield by sliding the Controller out of the Holder.

## Connecting to the Controller

Before you start surveying or following up on leaks, turn on the ALFX Controller by touching a magnet to the target on the endplate. The LED will illuminate.



## Recharging the Controller

Use the USB-C power cable with the wall plug adapter or auto adapter, included in the ALFX Controller case, to recharge your Controller.

On a full charge you can expect about 6 months of battery life when turned off (on the shelf) and up to two weeks of use when turned on for 8 hours per day.



# 64seconds

945 Concord Street  
Framingham, MA 01701  
508.620.4768/508.371.3433 (fax)  
sales@sixtyfourseconds.com