


ALFX Survey Quick Start


Step 1: Prepare for Surveying

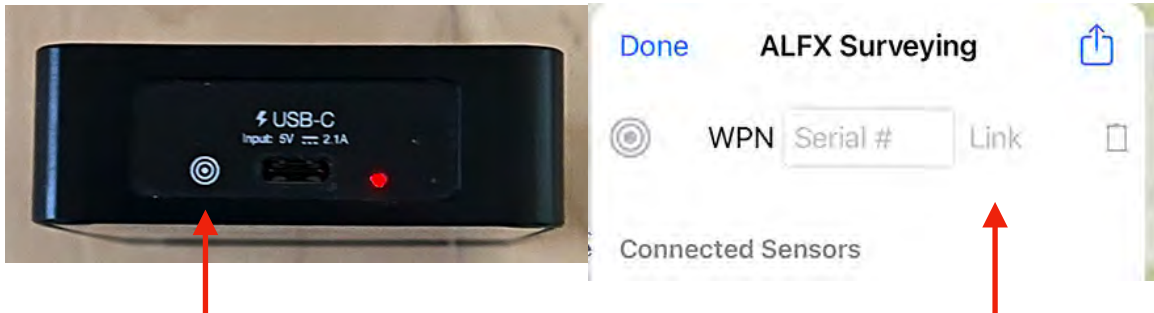

1. Turn on the ALFX Controller by touching the magnet to the target symbol.
2. In the ALFX Main view, tap the **Leak Surveying** button.
3. Enter the 5-digit Controller serial number (65xxx) and tap **Link**.

Step 2: Read ALFX Sensors Between 7 AM and 3 PM Weekdays

Drive up to the first ALFX sensor, you may have to come to a stop.

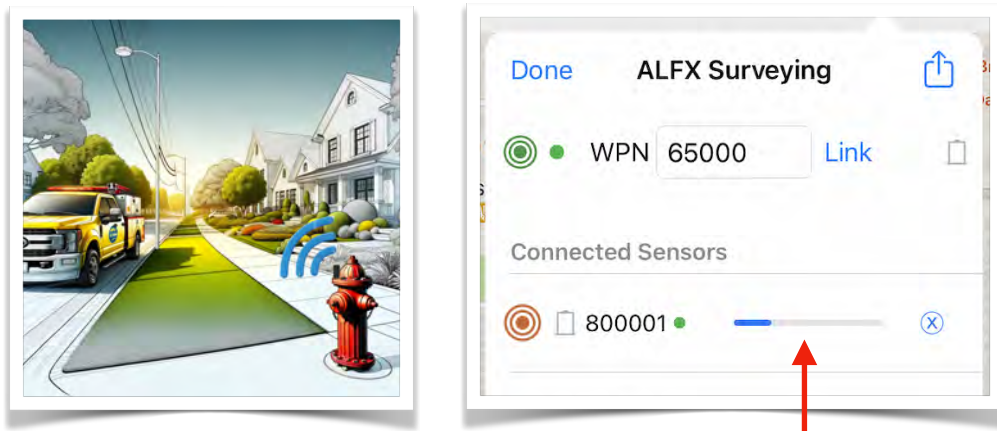

1. On connection WPN2 will make a 2-tone sound and the sensor ID will display.
2. Communicating with a sensor takes 6 - 10 seconds: with a 3-tone sound on success.

Step 3: Cloud Syncing

At the end of the day, or after surveying sensors, in the ALFX Main view, tap **Start ALFX Sync** to sync ALFX data with the ALFX Cloud.

