


Fernco Qwik Cap Installation

Temporary or permanent cap for pipe ends, testing & cleanouts.

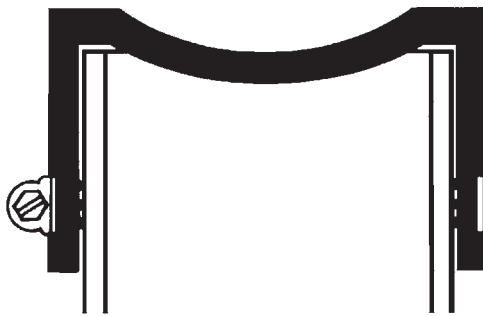

1. Loosen the stainless steel clamp. Do not remove clamp from Qwik Cap.
2. Push Qwik Cap onto the open end of pipe.
3. Tighten clamp to 60 inch-lbs. torque.

Ti SALES

36 Hudson Rd
Sudbury MA 01776



800-225-4616
www.tisales.com



United States
PH: 810-653-9626
FX: 810-653-8714

www.fernco.com

Canada
PH: 519-332-6711
FX: 519-332-8610